


INSTALLATION INSTRUCTIONS

FOR KNURLED BASEBOARD DOORSTOPPER

PARTS

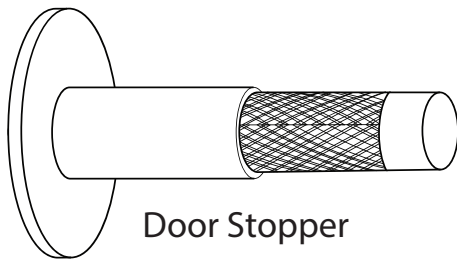


Anchor



Dowel Screw


STEP 1

Position on the wall behind the door
4" above the ground, or parallel
to the handle.

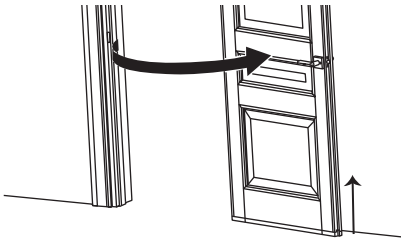


STEP 2

Mark the spot with a Pencil.

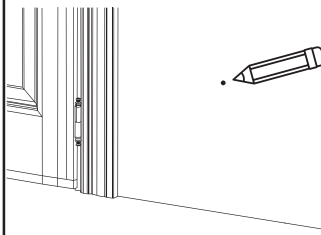


STEP 3

Drill a 3.5 mm hole for the screw.
Use the anchor for drywall or
plasterboard.

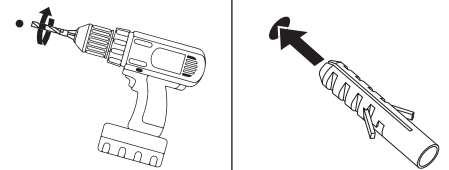


STEP 4

Twist the dowel screw into the bottom of the
doorstopper, and then into the wall.

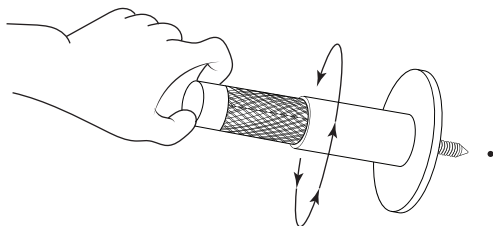

STEP 5

Test the doorstop to ensure its properly aligned and
adjust if needed.

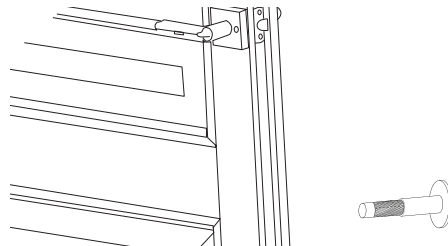

Knurled Baseboard Stopper

Questions? We are here to help!
Please email support@megahandles.com